




ELP5 PRO-VCI
INSTRUKCJA OBSŁUGI



DIAGPROG5
INSTRUKCJA OBSŁUGI

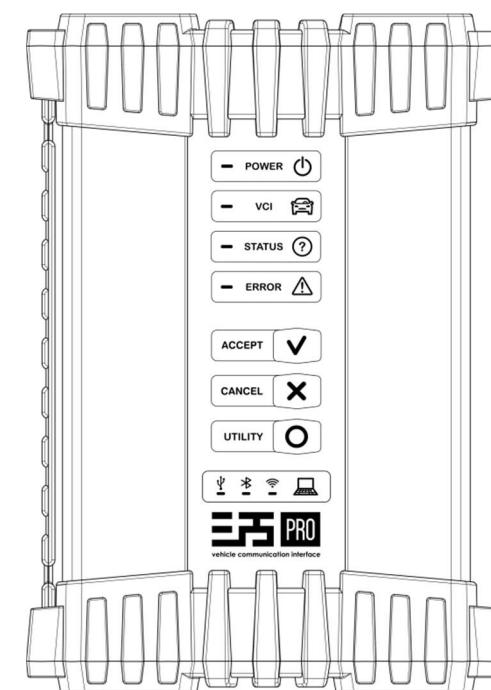


SKLEP
ONLINE




*DZIĘKUJEMY ZA TWOJE ZAUFANIE
I ZAKUP URZĄDZENIA DIAGPROG5*


TABLET – FRONT

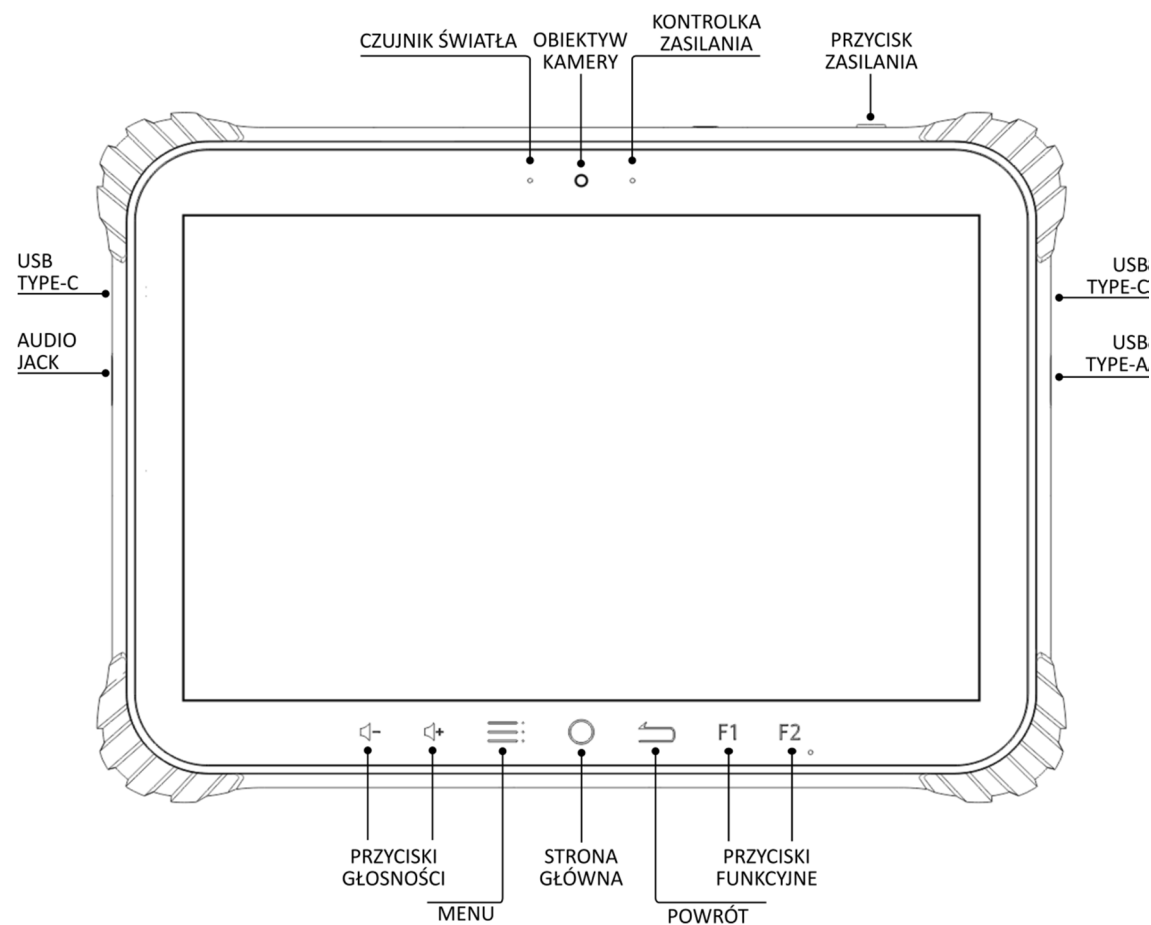


TABLET – REWERS

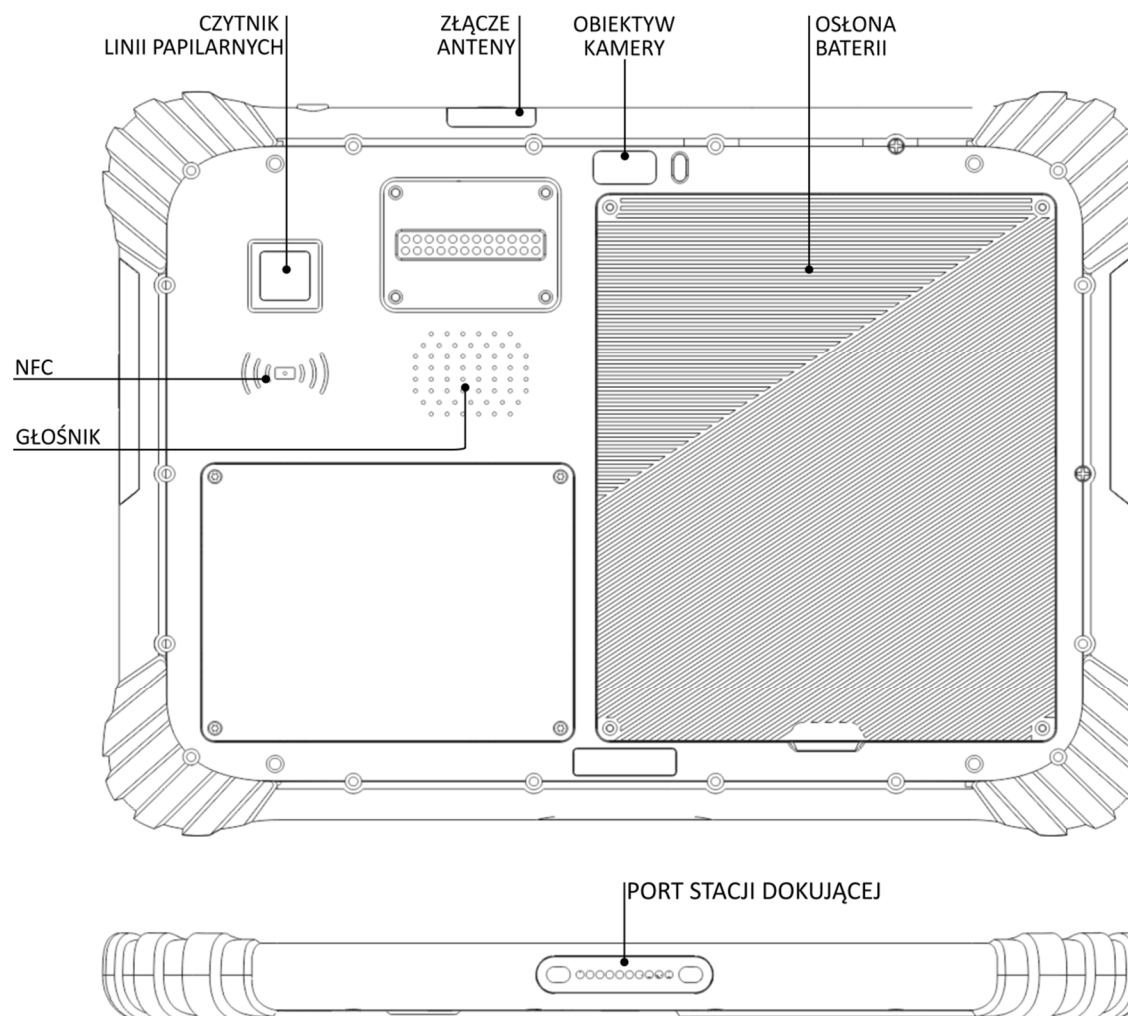

ELP5 PRO – VCI – FRONT

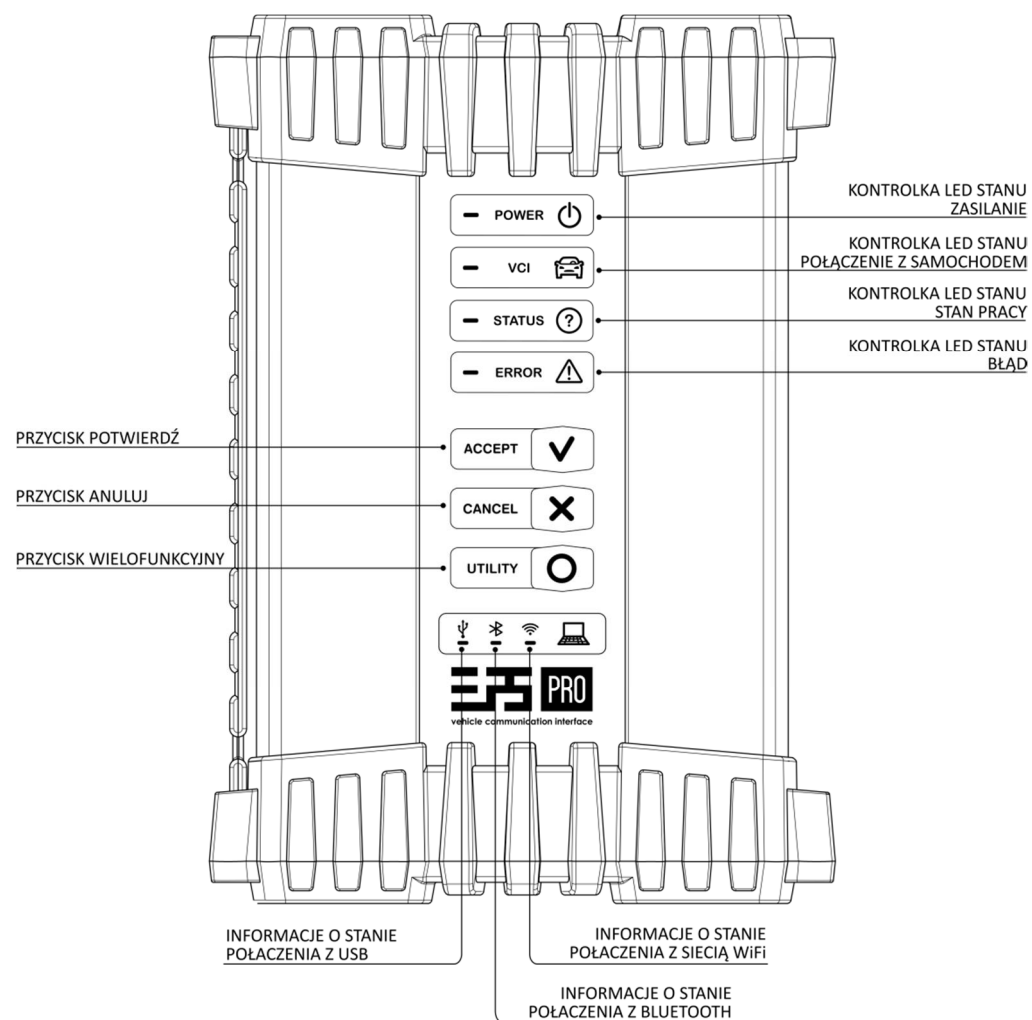

ELP5 PRO – VCI – ZŁĄCZA

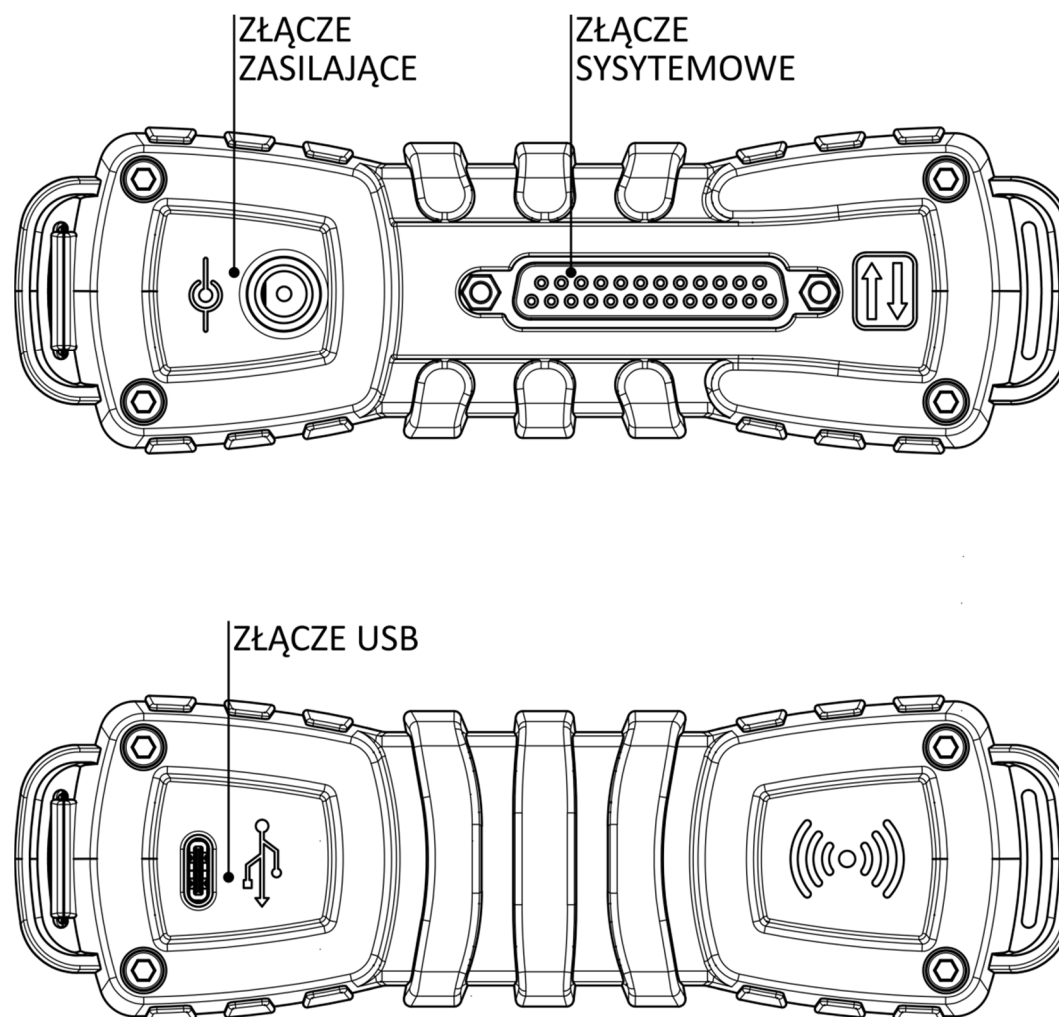


DIAGPROG5 PIERWSZE URUCHOMIENIE

1


Na tablecie wciśnij i przytrzymaj przycisk zasilający

UWAGA: w przypadku niskiego poziomu stanu baterii
podłącz do źródła zasilania

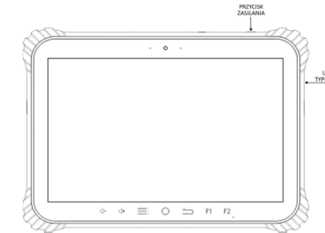

2


Po uruchomieniu systemu pojawi się ekran powitalny. Przejdź przez proces wstępnej konfiguracji obejmujący m.in. wybór języka, ułatwień dostępu

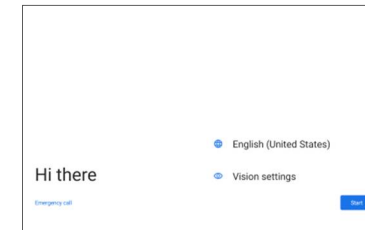

3



Połącz tablet z siecią WiFi:

1. wybierz odpowiedni SSID sieci
2. wprowadź hasło

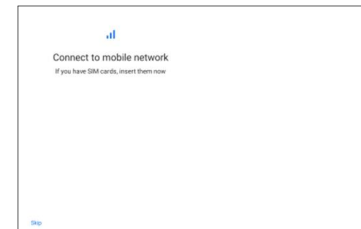

4

Zaloguj się do konta Google lub utwórz nowe konto. Przeczytaj i zaakceptuj warunki usług Google

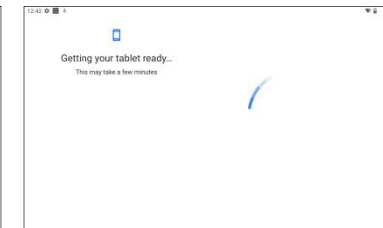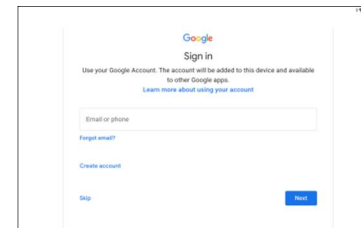

5

Na ekranie startowym kliknij i przytrzymaj ikonę programu DP5.
Wybierz kolejno: informacje o aplikacji -> Szczegóły aplikacji.
W przypadku dostępności, wykonaj aktualizację.



6

Uruchom aplikację DP5 i zaakceptuj warunki umowy.




**OPROGRAMOWANIE DIAGPROG5 JEST DEDYKOWANE
I DOSTOSOWANE DO PRACY Z TABLETEM DOŁĄCZONYM DO ZESTAWU.
ELPROSYS NIE GWARANTUJE POPRAWNEGO DZIAŁANIA APLIKACJI DP5 NA
INNYCH URZĄDZENIACH.**



7


Połącz VCI do tabletu:

1. Podłącz zasilanie do VCI
2. Wybierz systemowe ustawienia Bluetooth tabletu i wskaż swoją głowicę VCI
3. W aplikacji DP5 kliknij VCI manager
4. Kliknij Połącz

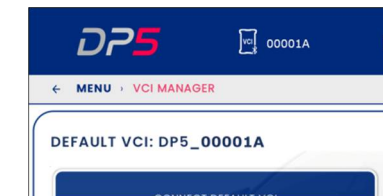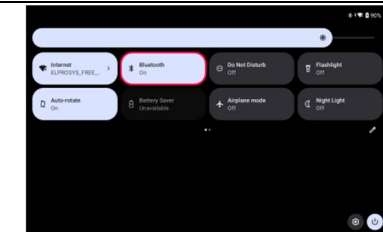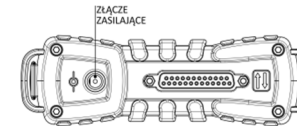


8

Wykonaj update oprogramowania i przeprowadź aktywację pakietu oprogramowania DP5.
Uruchom aplikację DP5 następnie z ekranu głównego wybierz:
SETTINGS -> DOWNLOAD UPDATE/ACTIVATION.

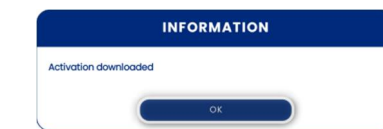

Gratulacje, proces aktywacji został zakończony.

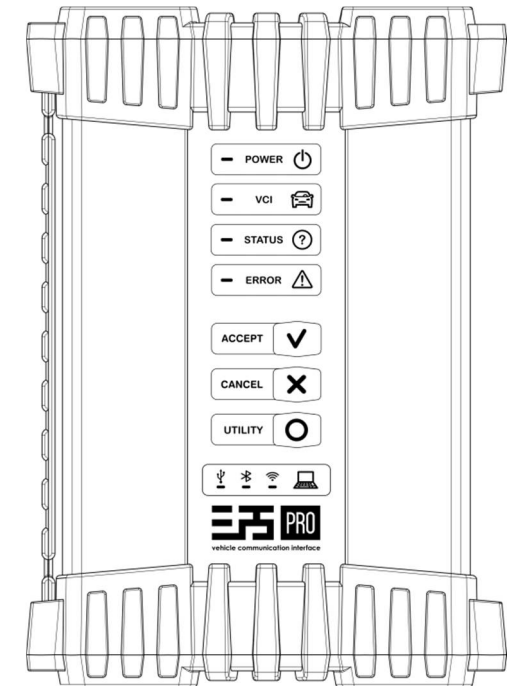

ELP5 PRO-VCI
MANUAL



DIAGPROG5
SOFT MANUAL




ONLINE
SHOP




*THANK YOU FOR YOUR TRUST
AND PURCHASE OF THE DIAGPROG5 DEVICE*


TABLET – FRONT

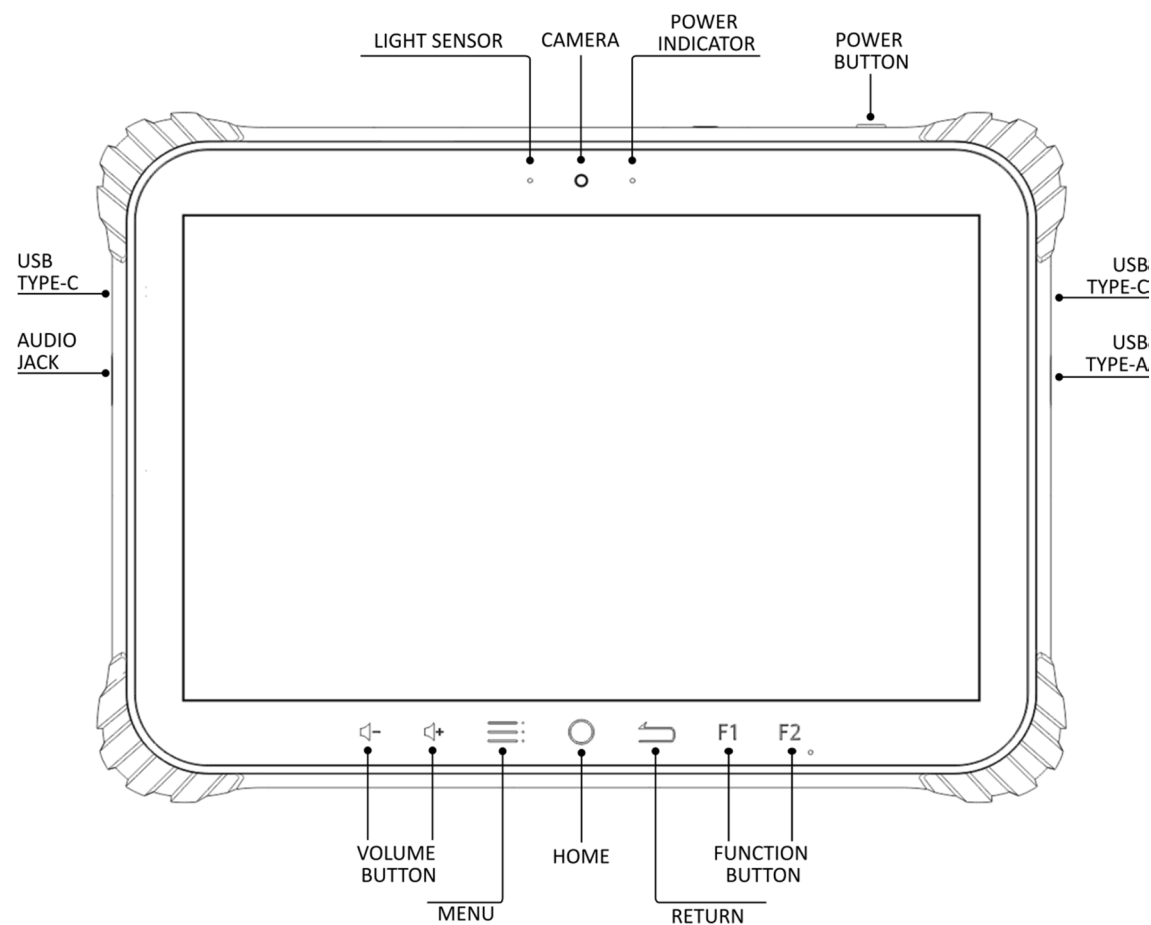



TABLET – REVERSE

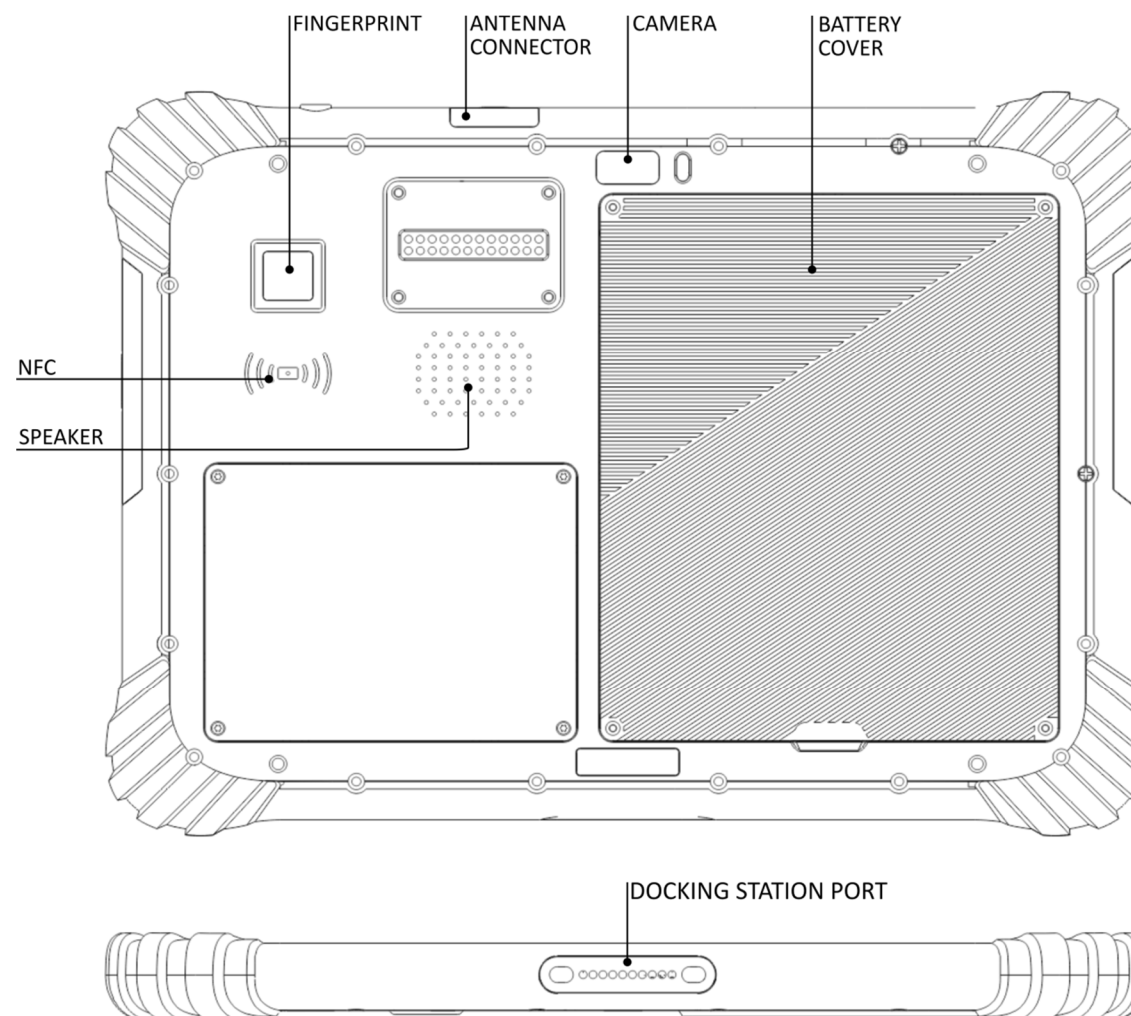

ELP5 PRO – VCI – FRONT

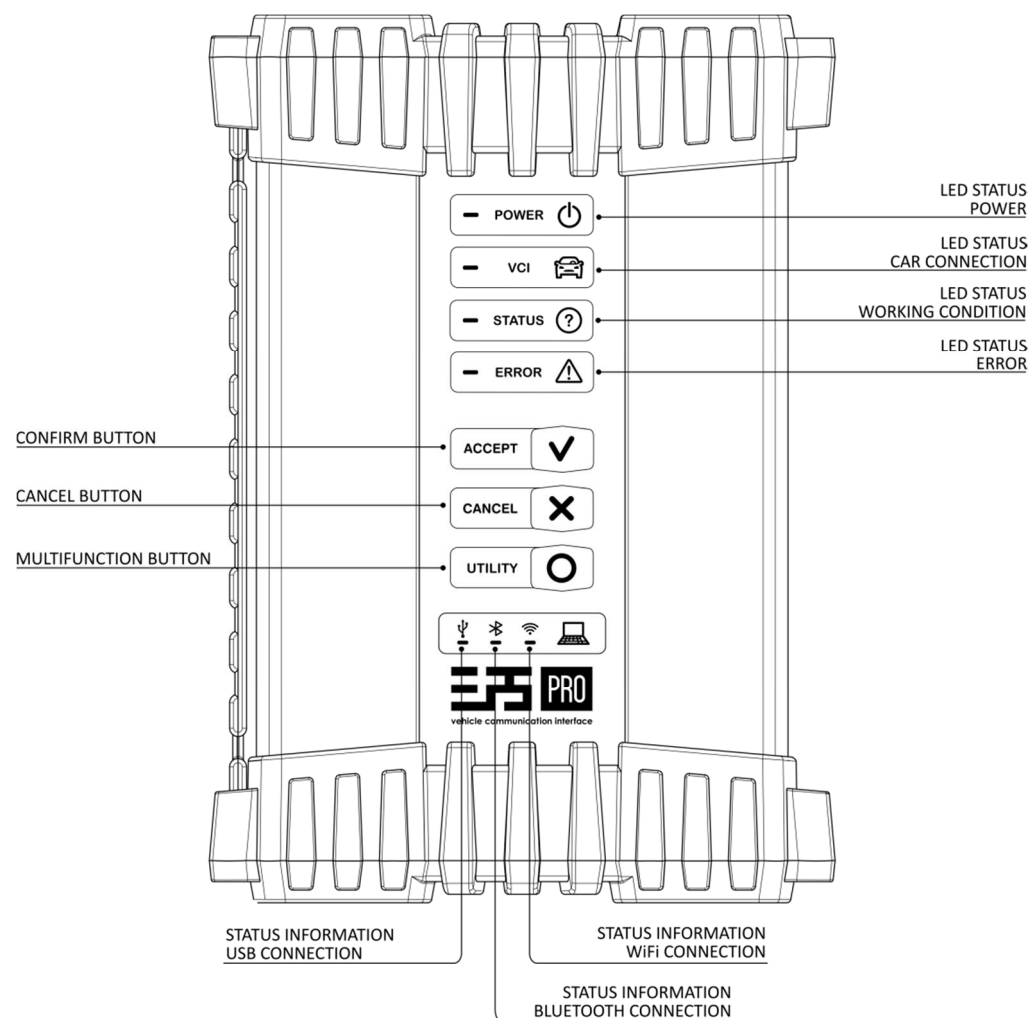

ELP5 PRO – VCI – CONNECTORS

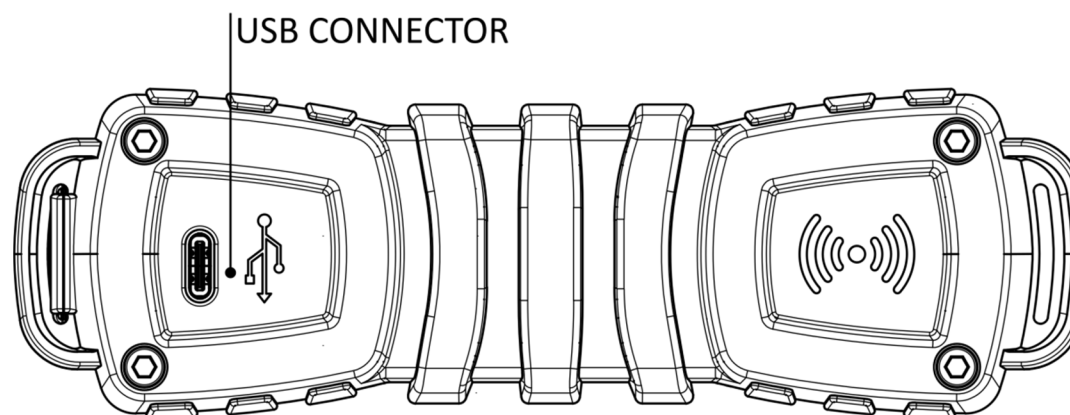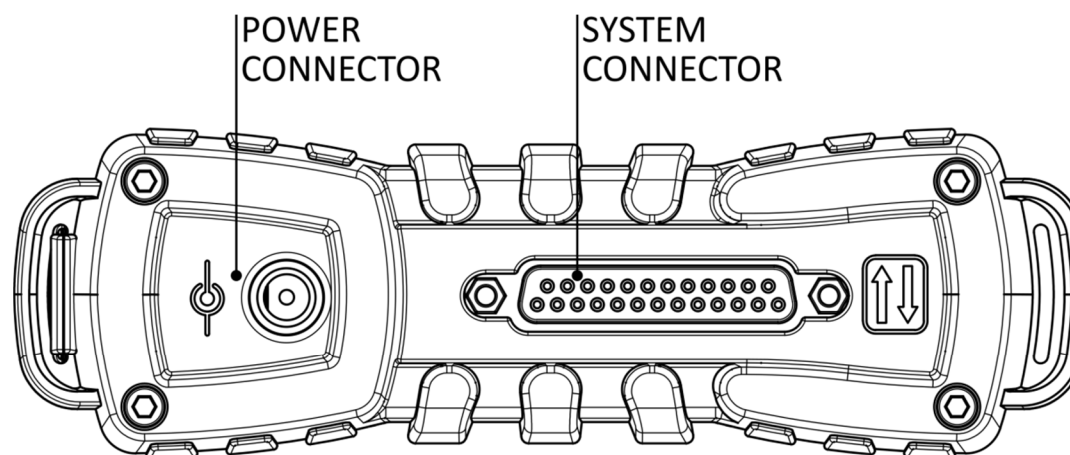


DIAGPROG5 – FIRST START

1


On the tablet, press and hold the power button until the ELPROSYS logo is displayed

NOTE: in case of the appearance of an empty battery icon, charge the tablet

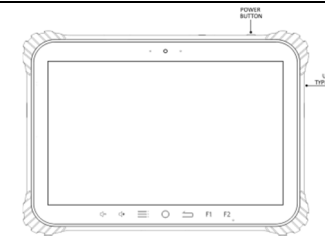

2


After starting the system, the welcome screen will appear. Go through the initial setup process, which includes language selection and accessibility

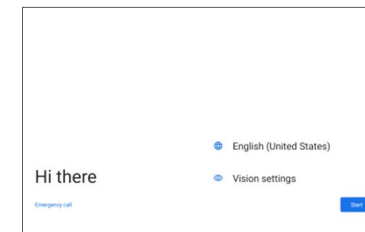

3



Connect your tablet to the WiFi network:

1. select the appropriate network SSID,
2. enter your password

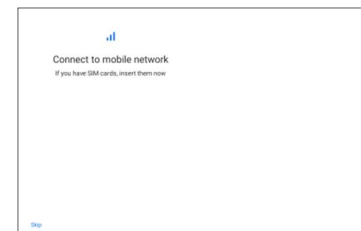

4

Sign in to your Google account, or create a new account. Read and accept the terms of Google services

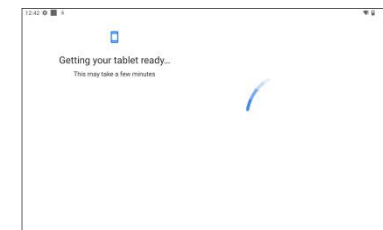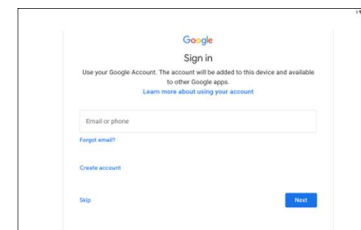

5

From the main screen press and hold the icon of DP5 App.
Select App Info -> App Details.

In case of availability of the new version of the App perform the update. .



6

Run the DP5 App and accept the terms of the agreement.

THE DP5 SOFTWARE IS DEDICATED AND PREPARED FOR WORK WITH THE TABLET INCLUDED IN THE SET.




ELPROSYS DOES NOT GUARANTEE THE PROPER WORK OF THE DP5 APP ON OTHER DEVICES.



7

Connect VCI to Tablet:


1. Power on VCI
2. From the Bluetooth settings of the tablet select your VCI
3. In DP5 App select VCI Manager
4. Click connect

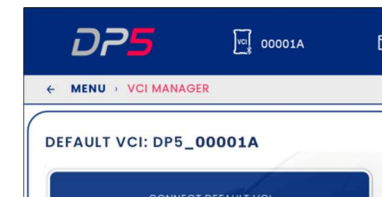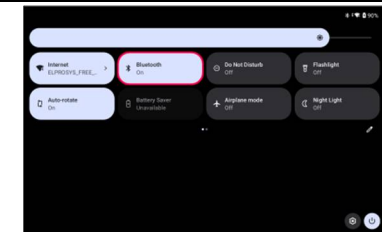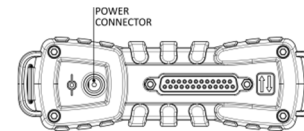

8

Perform the update and activate the DP5 software package.
Start the DP5 application then from the main screen select:

SETTINGS -> DOWNLOAD UPDATE/ACTIVATION.

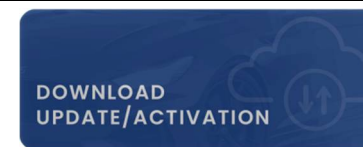

Congratulations, the activation process is complete.